

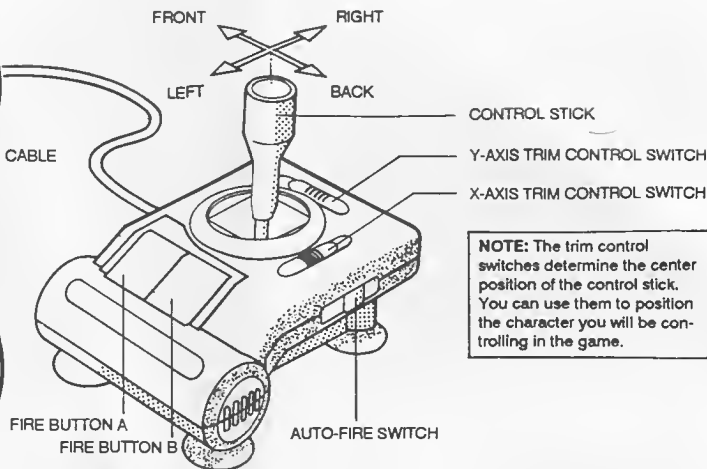
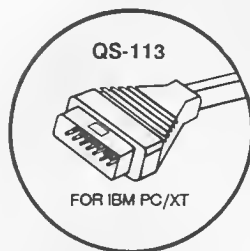





QS-113/119 INSTRUCTIONS

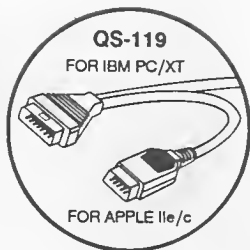

NOTE: The trim control switches determine the center position of the control stick. You can use them to position the character you will be controlling in the game.

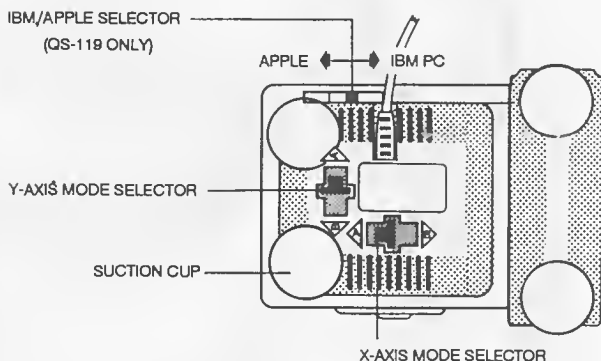

HOW TO HOLD YOUR JOYSTICK

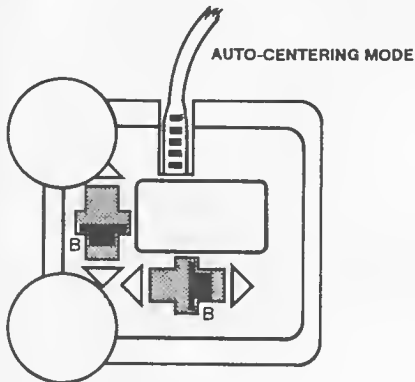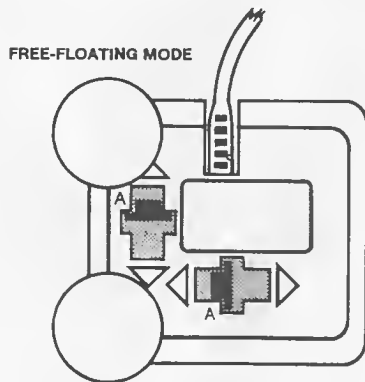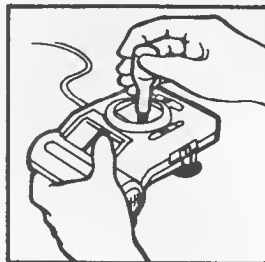

To set the operating mode, hold the control stick to one corner of the socket and slide the mode switches until they "click" into place.